

①五十铃MUX上电吸安装说明 (英文版)

Matters Needing Attention


All the pictures in this manual are for reference only. The pictures may differ from the actual ones, but the installation method is the same.

For your convenience, please read the instruction manual of the product carefully before installation. Please pay attention to protect the surface of your car and avoid scratching.

Please check regularly that all accessories connected to the car are tight to ensure safe use.

Common Issues

1. Bracket installation reverse: trunk door does not close properly
2. The bracket screw is not replaced as required: the door does not close properly, will damage electric poles
3. The ECU control box is not plugged in properly, loose: there is no force when opening or closing the door or the anti-pinch force is heavy
4. Pole ball head, the circlip is not installed properly: the poles detach during use (check after installation)
5. The connector is not plugged in properly, it falls off: the function fails.
6. The electric suction lock is off center: the door cannot close, the door gap is large, and the tension is tight, which causes the door to open loudly.
7. Installed in a new car for a long time without restarting the car, resulting in low power: door opening or closing not functioning normally, need to restart the car
8. Adding more than 5 kg of soundproof cotton to the tailgate may affect the opening or closing door force, add power to ECU control box.
9. Long press the tail door button for 3-5 seconds till you hear the "beep" sound - the sound is long, loosen hand and push down the tailgate and will hear a "beep beep" sound, completing the programming (the tailgate will not function normally in un-programmed state)
10. When the ball head is wrong, the non-aligned ball head can be rotated 360 degrees.

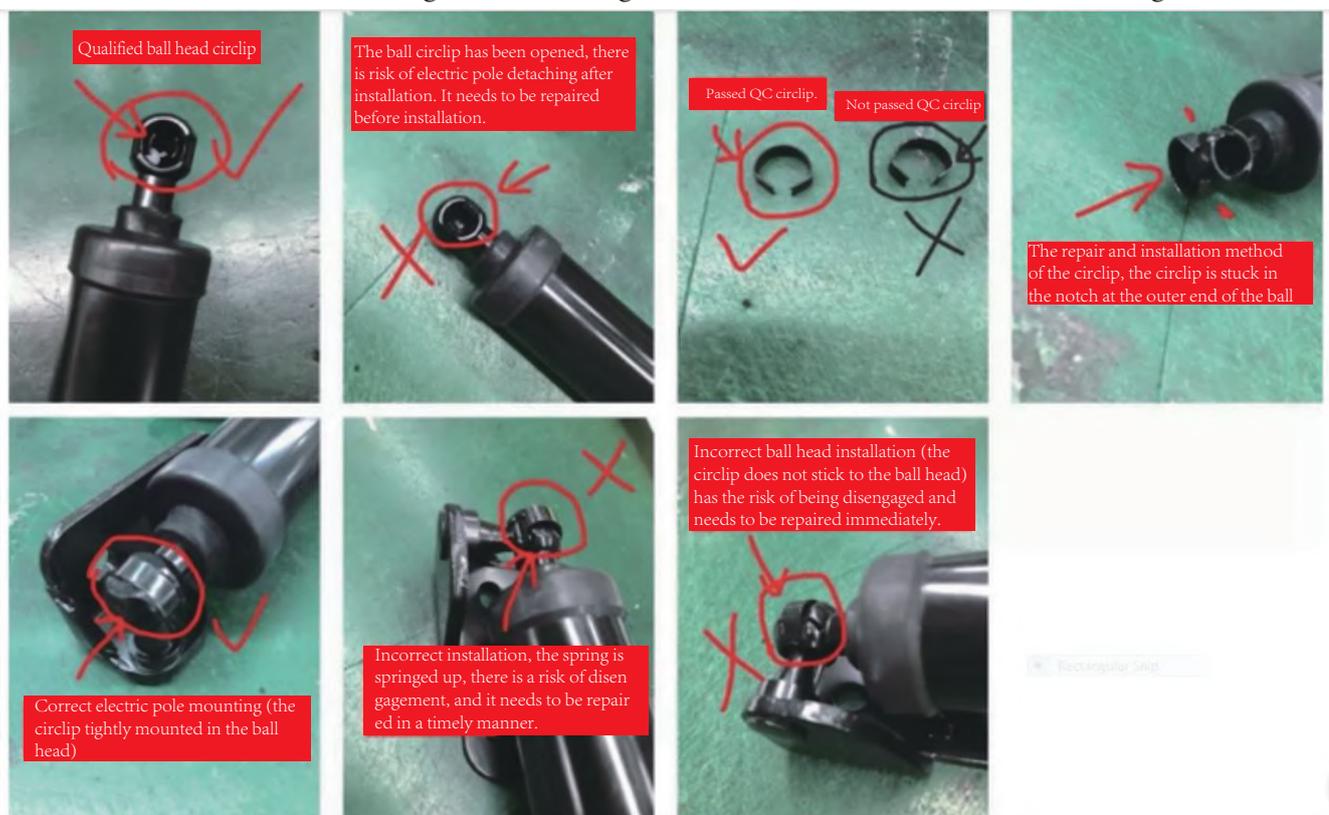



1.Remove the original car trim



2.Remove the left lower bracket and support rod of the original vehicle, install the left lower bracket of our company, and fix it with our company's screw. Note: Someone needs to hold the door.



3.Install our support rod with the ball head of the original car (the same steps are left and right)



4.Remove the right lower bracket of the original car, install the right lower bracket of our company and fix it with our company's screw



5.Punch holes in the waterproof plug and the Hall line passes through the holes.



6.Hall wire goes through the rubber plug to the tail door cover



7.Find power on the right side of the main driver



8.Unplug the 20A fuse of the original car



9.Plug in our power plug



10.Remove the trim at the lower right of the power supply and find the ground wire




11.Connect Ground Wire




12.Remove the trim board at the B pillar of the right main driver's seat belt and find the original car central control. Our company's central control wire connects the blue line of the seat.



13.Punch holes in the lower panel of the power supply and install the front switch of our company

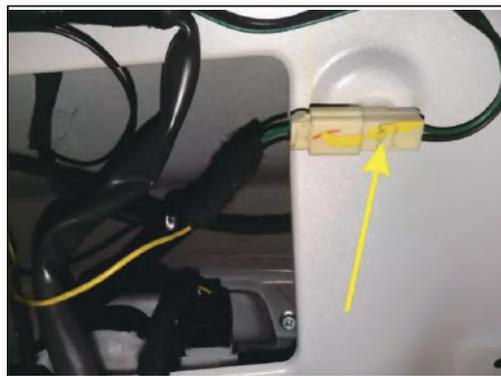

14.Find this seat at the tail gate

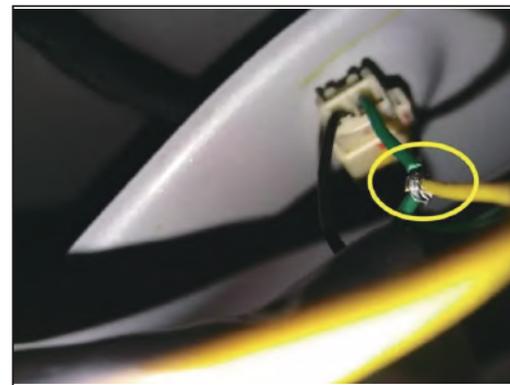

15.Our Yellow Wire Connects the Green Wire of this Seat




16.Pull out the plug at the rear door lock and plug in the three-way socket of our company. The other end plug of our company's three-way socket is plugged in the original door lock.



17.Remove the original locks



18.Install our electric suction lock and fix it with original screw

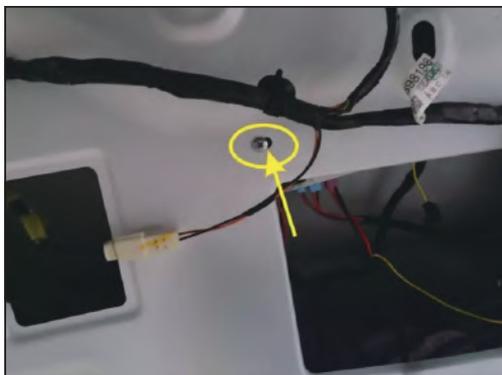

19.Install our central control box and fix it with our screw and gasket



20.Plug Hall wire, power cord and electric suction wire into control box one by one according to color



21.Punch holes in the tail door panel, install the tail door button of our company, and restore the panel.

After the installation is completed, you must set up the tailgate programming settings. Make sure that the doors are closed in place.

(Raise the tailgate to the desired height, press the tailgate switch button, 3-5 seconds will appear a "beep" sound, loosen hand, then press the tailgate button to close, the tailgate is close in place, and there is a "beep" sound, that is, the tailgate programming is completed)

Disclaimer

The related problems and losses caused by improper installation and use are not covered by our company's warranty. Please read this manual carefully before use. Please store carefully after reading, so that you can check it later. The picture is for reference only. The product is subject to the actual object.

Button control mode

- 1: Long press on tailgate button for three seconds to open or close door on the original car remote control
 - 2: Press once on the open/close door button on the front switch.
-

Height Setting

Raise the tailgate to the desired height, press the tailgate switch button, 3-5 seconds will appear a "beep" sound, loosen hand, then press the tailgate button to close, the tailgate is closed, and there is a "beep" sound, that is, the tailgate programming is completed

Solution to Electric Tail Door Failure

Fault Phenomenon	Troubleshooting
The original car remote control did not work	Whether the yellow center line connected properly
Does not work after installation is complete	Check if the positive power supply is connected to 12V-16V Check if the power cord fuse is plugged in. Check if the ground wire is connected
Tailgate do not close properly	Whether the left and right brackets of the poles are reversed Whether the control box cables plugged in properly Whether the bracket is fixed or replaced with our special screw There are two vinyls on the left and right sides of the original rear door. If it is loose, it needs to be tighten.
The original car remote cannot close the door	Whether there is any programming after installation. The first time you install on the car, you need to program by using the tailgate button once. Programming steps; open the door and press and hold the door button for three seconds. When you hear a click, release the hand and press the button again. The tail door will automatically close and programming is complete.
The tailgate does not go up halfway	Whether the left and right brackets of the poles are reversed Whether the control box cables is plugged in properly Whether the bracket is fixed or replaced with our special screw